

UPDATE Release 1.024



This operation will erase all your XK-3C data. We will not take any responsibility if you lose your data or if you have any other trouble by using this Update. So you are recommended to do the back-up operation before you perform this Update.

OUTLINE

This updates the XK-3C software to the following version:

- Main System: V1.024

UPDATE RECORD

◆Main System V1.024

- The MIDI information will be correctly transmitted when it is connected to the MIDI interface for Apple's Macintosh or M-Audio's iControl.
- NRPN Transmission will be possible (1) when the External Zone switch is operated in the function mode, (2) when the "EXT.SWITCH" is assigned to the assignable button, and (3) when LESLIE FAST is assigned to the Modulation Wheel.
- Stability of the movement is improved.
- Foot switch option is updated. "Leslie S/F Alt" works only slow and fast. "Leslie S/F Tri" works slow, fast and stop (same as previous versions of "Leslie S/F Alt").

HOW TO UPDATE

◆NECESSARY EQUIPMENT

Prepare the following equipment:

- A Personal Computer (= hereinafter PC) installed with Windows95 or a later OS, with the reader/writer corresponding with the CompactFlash Card.
- CompactFlash Card (= hereinafter CF): formatted with the XK-3C or a PC. Select FAT or FAT32 when you format the CF with a PC.

Refer the models of the CompactFlash Card usable for the XK-3C to the following:

<http://www.hammondorganco.com/> (USA)

<http://www.hammondsuzuki.com/> (Europe)


◆FILE COPY

1.



Insert the CF to the PC.

2.

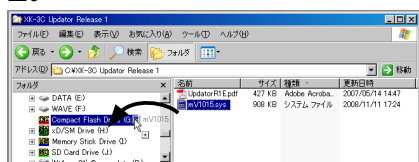

Copy the extracted System File to the CF.

◆BACK UP

3.



Insert the CF to the XK-3C and turn ON the power of the XK-3C. (The update will not start yet.)

4.




Save your Set Up. After this, 2 files will exist in the CF: the System File and the Set Up File.


For instruction on saving your setups please see page 100 of your owners manual.

◆UPDATE


5.

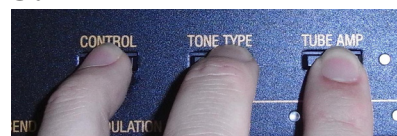

Switch OFF the power and then turn it ON again pressing the 3 buttons: [CONTROL], [TONE TYPE] and [TUBE AMP].

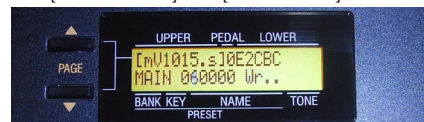


Loading of the System File begins. The mode as shown above appears in the display while the file loads.

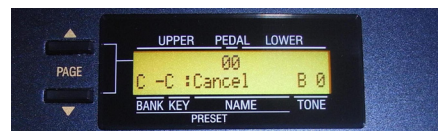

When loading is completed, the PLAY mode appears in the display.

◆RESTORE

6.

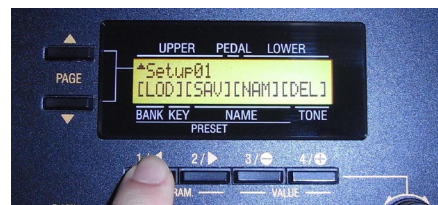

Reload your setups from the backed-up setup. The operation is complete now.

Manufacturer:

SUZUKI MUSICAL INSTRUMENT MFG. CO., Ltd
25-12, Ryoke 2 Chome
Hamamatsu 430-0852 (Shizuoka)
JAPAN